



**Detroit Speed**  
**Door Jamb Boot Wiring Kit**  
 P/N: 010420DS, 010421DS, 010422DS

Detroit Speed's Universal Door Jamb Wiring Boots provides an attractive solution for routing wiring in your custom car build. The EDPM rubber boots provide OE style, appearance, and wiring protection. Customize the DSE kit further by adding billet trim rings, available in machined or black anodized finish.



P/N: 010422DS Shown

Item	Description	Quantity
1	Door Jamb Wiring Boot	2
2	Door Jamb Boot Trim - Black Anodize (P/N: 010422DS Only)	4
3	Door Jamb Boot Trim - Billet (P/N: 010421DS Only)	4
4	#8 x 3/4" L SS Oval Head Screw (P/N: 010421DS & 010422DS Only)	8
5	5/32" OD x 3/8" L Weather Strip Retainer (P/N: 010420DS Only)	8
6	Instructions	1

## Installation Instructions:

1. Cut out the template shown on page 5. Place the template on the body side of the door jamb in the desired location. Use tape to hold it in place (Figure 1). **NOTE:** You may want to remove the door and/or fender from the vehicle depending on the application.



Figure 1 - Locate Template

2. Use a snap punch to locate the three hole locations on the template to the door. Remove the template and center punch the three hole locations (Figure 2).



Figure 2 - Center Punch Hole Locations

3. Drill a pilot hole at the middle hole location. Use a 9/64" drill bit and drill the top and bottom hole locations (Figure 3 on the next page).



Figure 3 - Drill Hole Locations

4. Use a 2" hole saw and drill the middle hole location in the door. Deburr the edges. (Figure 4).

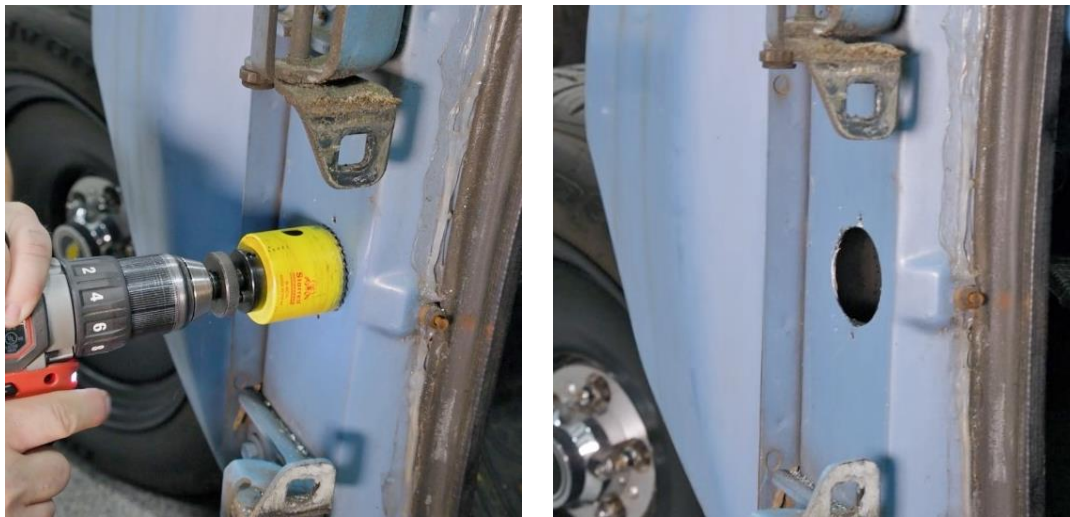


Figure 4 - Drill 2" Hole

5. Repeat this process for the door jamb. Test fit the door jamb boot in the 2" hole (Figure 5).



Figure 5 - Test Fit Door Jamb Boot

6. Install the door boot into the 2" hole on the body side of the door jamb. Use the provided weather strip retainers or the door jamb boot trim and #8 screws depending on the kit that was purchased (Figure 6).

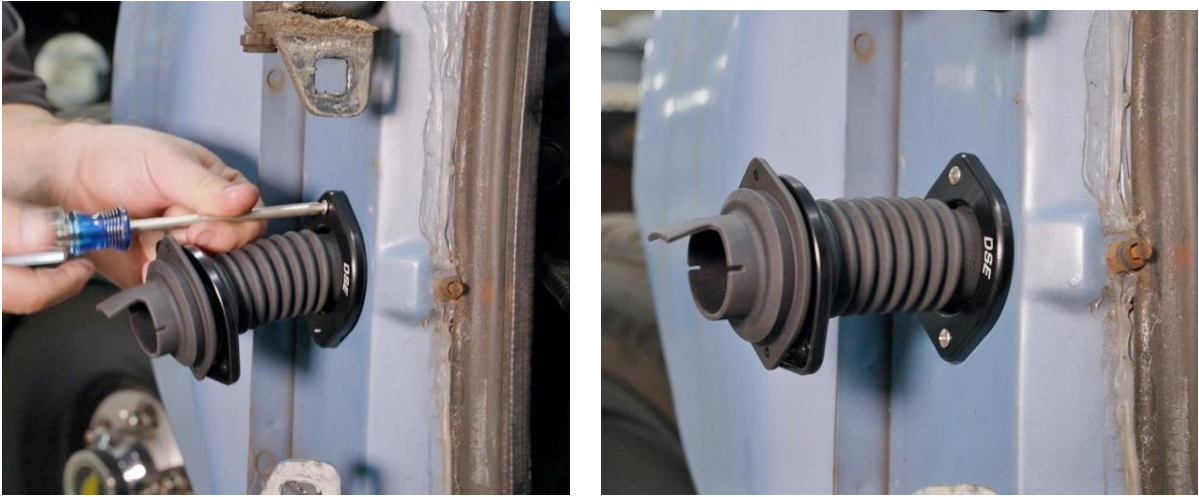


Figure 6 - Install Door Jamb Boots

7. Install the other end of the door jamb boot into the door. Use the provided weather strip retainers or the door jamb boot trim and #8 screws depending on the kit that was purchased.
8. Route desired wiring through the door jamb boot.
9. Repeat this procedure for the opposite side of the vehicle.

If you have any questions before or during the installation of this product, please contact Detroit Speed at [tech@detroitsspeed.com](mailto:tech@detroitsspeed.com) or 704.662.3272

**Legal Disclaimer:** Detroit Speed is not liable for personal, property, legal, or financial damages from the use or misuse of any product we sell. The purchaser is solely responsible for the safety and performance of these products. No warranty is expressed or implied.

